

## E-931ACC-BLS8Q Wall Bracket for ENFORCER Sensors Compatible with E-931CS22RRCQ, E-931CS22RFCQ, E-931-S35RRQ, and E-931-S45RRQ

## **INSTALLATION GUIDE**



Note that this bracket can be rotated 180 degrees for either left- or right-facing orientation as shown in the illustrations for E-931CS22RRCQ and E-931CS22RFCQ above. Please note that each sensor model uses different mounting holes.

- 1. First install the bracket to the metal door frame using included sheet metal screws. In order to permit final adjustment, avoid tightening the screws firmly.
- 2. Mount the sensor to the bracket as illustrated above for each sensor model and adjust position.
- 3. Remove sensor, taking care not to move the bracket.
- 4. Tighten the bracket mounting screws firmly.
- 5. Re-mount the sensor to the bracket.

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for 1 (one) year from the date of sale to the original customer.

NOTICE: The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors. Copyright © 2014 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

### SECO-LARM<sup>®</sup> U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606	Website: www.seco-larm.com
Tel: 800-662-0800 / 949-261-2999 Fax: 949-261-7326	E-mail: sales@seco-larm.com

# 1x Wall Bracket

- 3x Sheet Metal Screws
- 2x Screws for E-931-S45RRQ

PITSW1

MiE-931ACC-BLS8Q\_1404.docx Order Part # 764-102%